KMT - Kraus Messtechnik GmbH


Gewerbering 9, D-83624 Otterfing, Germany, 2008024-48737, Fax. 08024-5532 Home Page: http://www.kmt-telemetry.com, Email: info@kmt-telemetry.com



TEL1-PCM

Operating Instructions Digital Telemetry System for Strain Gage Applications on Rotating Shafts

"Gain and Auto Zero setting direct from Receiver Side!"

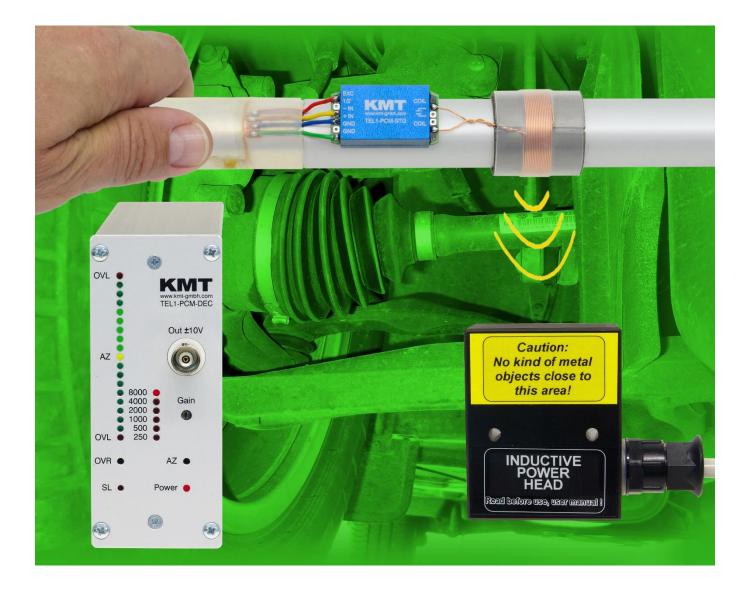

INSTRUCTIONS FOR QUALIFIED PERSONNEL ONLY!

Attention

- Use only shielded sensor cable
- When used on rotating shafts, all connections must be soldered.
- Mounting of the modules on a shaft must be first fixed with mounting tape (only for prefixing) and then with a <u>hose clamps!!!</u>
- The manufacturer doesn't accept liability for damages, which results from insufficient attachment of the individual components.



Safety Notes

- The device should only applied by instructed personnel.
- The power head emits strong magnetic radiation at 30-60 kHz to a distance of 20 cm. Therefore persons with cardiac pacemakers should not work with this device!
- Magnetic data storage media should be kept in a distance of at least 3m from the power head to avoid data loss. The same is valid for electromagnetic sensitive parts, devices and systems.
- Do not place the power head in the switched-on state on metallic objects, because this results in eddy currents, which could overload the device and strongly heat up small objects. In addition, the probe could be destroyed!
- No metallic objects, other than the disc-type coil, should be located in the air gap of the power head. The same applies to metallic parts within a radius of up to 50 mm in all directions.
- Do not use damaged or faulty cables!
- Never touch in the area between shaft and inductive head, the rotating shaft itself or rotor electronic contacts during operation!
- This is a "Class A" system suitable for operation in a laboratory or industrial environment. The system can cause electromagnetic interference when used in residential areas or environments. In this case the operator is responsible for establishing protective procedures.

General Description

The TEL1-PCM single-channel telemetry system offers the easiest handling for the wireless transmission of strain gage signals from rotating shafts. The very small encoder 35 x 18 x 12 mm with a weight of 13g. The transmitter (encoder) part is simply mounted on the rotating shaft with a special fiber reinforced tape.


Powering of the transmission part and the digital data transfer between transmitter and receiver is realized inductively.

Functional Description

The TEL1-PCM transmitter provides a pulse code modulated signal (PCM) to an induction winding around the *shaft (max. diameter 500mm, other on request!)*. The magnetic field of this winding enables the inductive transmission of the signal to the pickup coil. From there the signal is transferred by cable (5m) to the receiver. The maximum distance between the transmitter coil and the pickup is 25mm with standard head, <u>optional 35mm</u>

The receiver unit offers a BNC connector at the front panel with analog outputs \pm 10 V and an optional a digital output for <u>PCM-LAN IP-Interface</u> or a output 4-20mA. An LED bar indicator shows the actual level and a successful Auto Zero calibration. Overload is indicated by the last LED's in pos. or neg. direction of the bar graph. These OVL-LED's operate in peak-hold mode and are reset by pressing the overload switch.

Strain gage sensors (>=350 Ohm) in full- and half- bridge configuration can be directly connected to the transmitter. The excitation is fixed to 4 Volt DC and the gain is set by the gain switch on the receiver side. An auto-zero (AZ) adjustment is executed by pressing the AZ button on the front side of the receiver. The successful AZ operation is indicated by a yellow LED in the middle of the LED bar indicator. When the AZ completes the LED continuously illuminates. The AZ setting is stored in a Flash-RAM and thus is not lost during power-off. Use only shielded sensor cable.

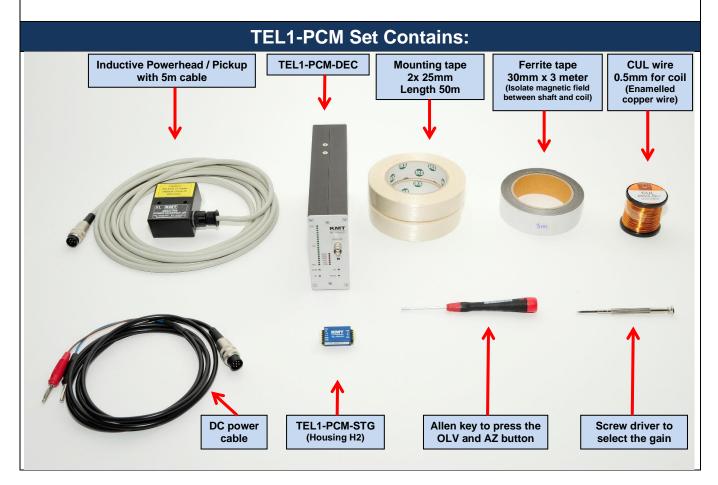

Technical Da	ta Transm	nitting Pa	rt:				
		<u> </u>					
	TEL1-PCM-S			~			
EXC	Strain gage: Full and 1/2 bridge >=350 Ohm,						
	Excitation: 4 VDC (fixed)						
- IN www.kmt-gmbh.com	Gain: 250; 500; 1000; 2000; 4		4000; 8000	(selectable from	receiver side)		
GND TEL1-PCM-STG COIL	Gain	Reso	lution	Autozero rang	ge		
GND	250	12	12 bit		100%		
	500		bit	200%			
Version 4.0 - SN 20091106 G=50-100-200-400-600-600 Stuffed with epoxy resin	1000		12 bit		400%		
	2000		bit	400%			
With built-in 220nF capacitor for shaft up to 400mm recommend!	4000		bit	400%			
Standard version!	8000	11	bit	400%			
	AZ: Auto Zero calibration (selectable from receiver side)						
EXC	Analog signal bandwidth: 0 - 1200 Hz (-3 dB)						
1/2 COIL	Operating temperature: - 40 to + 85 °C						
-IN www.kmt-gmbh.com	Sampling rate 6.944kHz						
GND TEL1-PCM-STG COIL	Dimensions: 35 x 18 x 12mm (without connectors)						
		module 13 grai	ms (with ep	oxy resin)			
	Powering: Inductive						
SN 20110609 - V4.1	Housing: splash-water resistant IP65 (except the connector pins)						
					-		
Without built-in capacitor. Only with external capacitor! E. g. 100nF							
for larger shaft >400mm! Specify at order!							
		I-K - Select G					
		Iltiply the value		000 with x4			
	Max. Voltage o	utput at receive					
+ TH TEL1-PCM-TH-K COIL		-	at receiver				
	°C	Normal	Min.	Max. (V)			
		(V) -0,508	(V) -0,450				
	-50						
	0	-0,005	-0,050	,			
with female K type thermocouple connector	50	0,508	0,450	0,550			
	100	1,012	0,950	1,050			
	150	1,505	1,450	1,550			
		2,000	1,950	2,050			
CON.	200	2,505	2,450				
and the second se	250	-		-			
approximit.	300	3,010	2,950	· · ·			
Alter CONT.	350	3,511	3,450	3,550			
THO TELIN 13	400	4,014	3,950	4,050			
CANTH 09/4	450	4,511	4,450	4,550			
CHENN TELLER		5,011	4,950				
SMIL	500						
	550	5,511	5,450				
	600	6,010	5,950				
	650	6,507	6,450	6,550			
	700	7,007	6,950	7,050			
with solder pins for thermocouple		7,507	7,450	-			
	750	8,007	7,950				
Analog signal bandwidth: 0 - 10 Hz (-3 dB)	800						
Accuracy: +/-0.5 % (without sensor)	850	8,505	8,450				
Operating temperature: - 40 to + 85 °C	900	9,003	8,950	9,050			
	950	9,502	9,450	9,550			
Dimensions: 35 x 18 x 12mm (without th-connector)	1000	9,999	9,950	10,050			
Weight: each module 13 grams (with epoxy resin)							
Powering: Inductive	If no thermocouple is connected,						
Housing: splash-water resistant IP65	output is -1000°C = -10V						
(except the connector pins)		laura): 0.05 5"		- 0.1.1.1.)			
	Vibration (random): 0.05 g ² /Hz (20 Hz to 2 kHz)						
	Vibration (sine): 10 g (20 Hz to 2 kHz)						
Common characteristics / Environment	Shock (½ sine): 500 g peak (11 ms)						
		Static Acceleration: 3000 g (depends on mounting!)					
(rotating parts)				n mounting!)			
(rotating parts)	Operating tem	ation: 3000 g (perature: -40 % (not condens	to +85°C	n mounting!)			

Technical Data Receiving Part







PH-PU Standard with ride side cable out


Caution: No kind of metal objects close to this areal INDUCTIVE IN

TEL1-PCM-DEC Front side:

Analogue output: +/-10V via BNC (delay between analog IN/OUT 15mS constant!!) Digital output for PCM-LAN-IP-Interface OPTION or Current output 4-20m output OPTION Gain setting : via screw switch Auto Zero setting: via micro switch Overload LED's (Red ON) reset: via micro switch Green LED's: Bargraph +/-Autozero LED: Yellow ON- successful AZ Yellow OFF- not successful AZ if flashing, call support of KMT, error in EPROM Green LED's: Bargraph +/-SL LED: Red ON = if error of data transmitting SL LED: Red Flashing = distance to far Power ON LED: Red ON = if power switch on Rear side: Output to Powerhead: via 6pol. Tuchel Fuse LED: Flashing if fuse is defect Powering: 10-30V DC (min. 24Watt), Input via 7pol. Tuchel Switch: ON/OFF Operating temperature: - 40 to +70 °C Dimensions: 200 x 105 x 44 (without connectors!) Weight 950 grams Static acceleration: up to 200g System accuracy*: +/- 0.2 % <*measure with gain 1000, 350ohm (0.1%) full bridge - test bridge!!> TEL1-PCM-Powerhead/Pickup (standard version) Function: Inductive powering of the TEL1-PCM-STG unit and receiving PCM magnetic field in PCM modulated code Inductive frequency is 60kHz Distance between the transmitter coil and the pickup is 25mm (25mm at diameter <300mm with 5m cable, 15mm with 10m cable) (Optional 35mm at diameter <300mm - see table) Output to TEL1-PCM-Decoder: Via 6pol. Tuchel Plug incl. 5m cable Operating temperature: - 40 to +85 °C Dimensions: 53x66x30mm (without cable) Weight: 200 grams (without cable!) Housing: splash-water resistant IP65 (except connector). Cable length standard 5m! 10m optional!

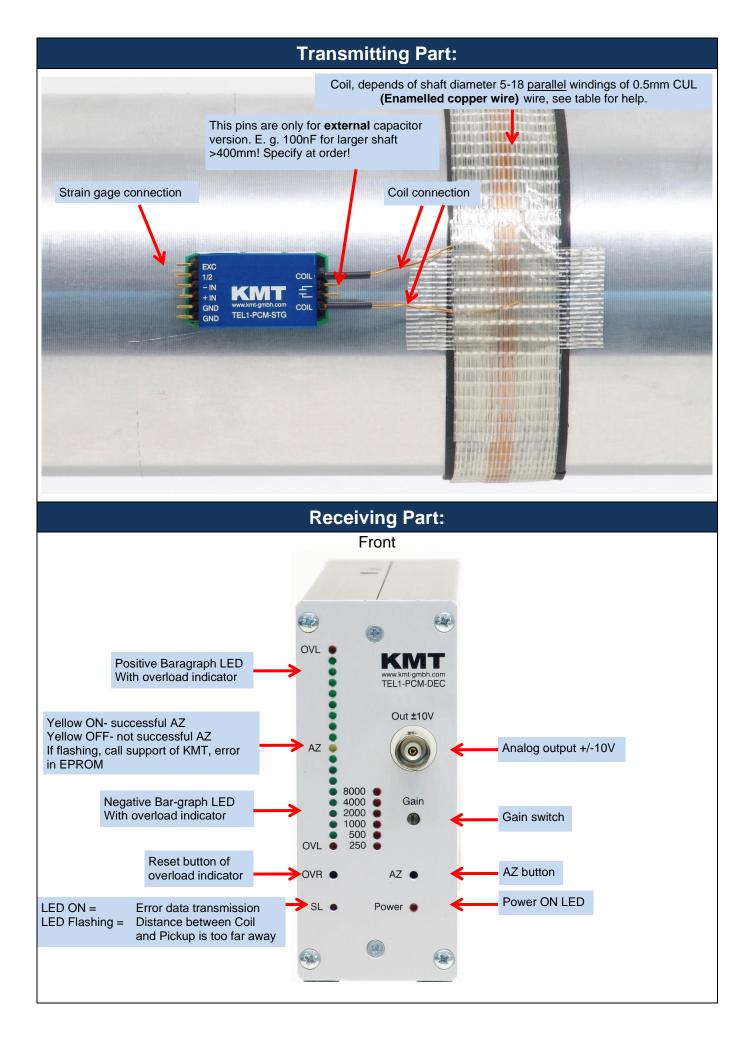


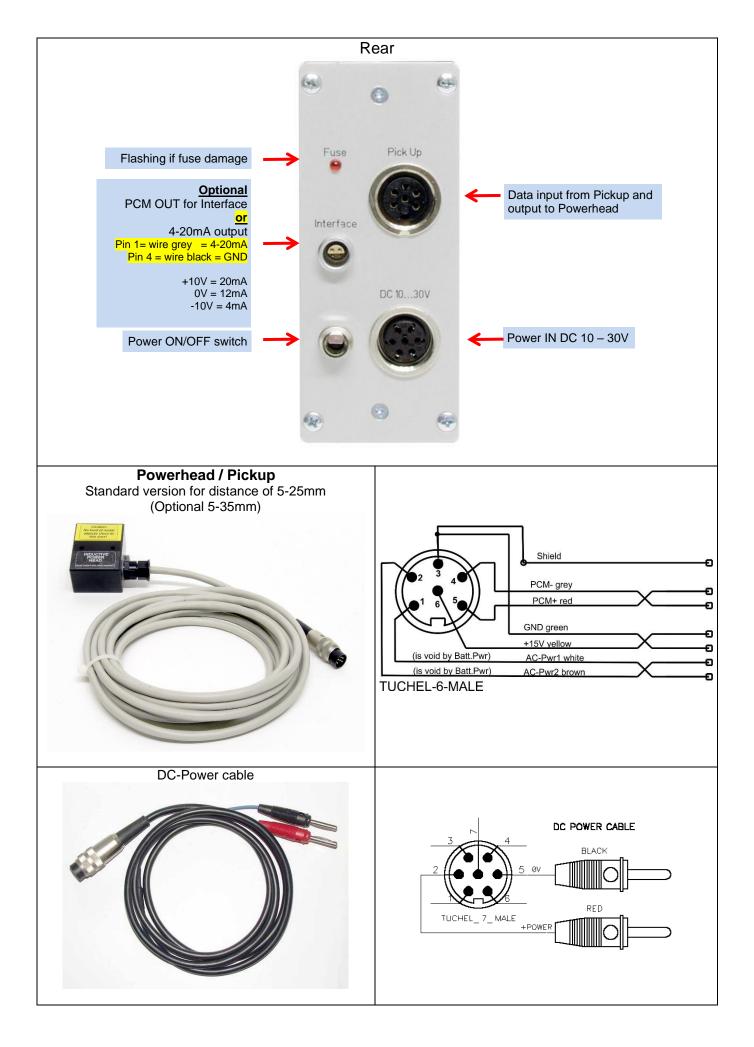

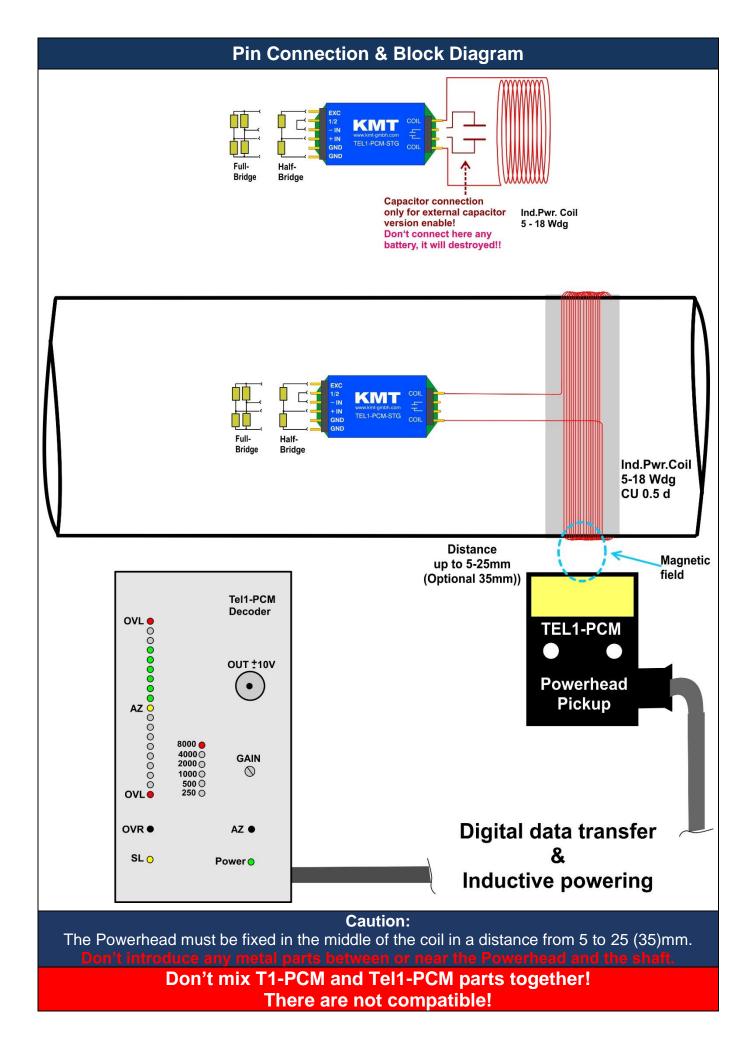



Dimensions Encoder - TEL1-PCM-STG

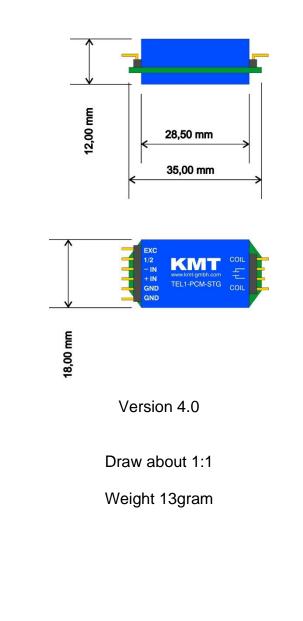

Shaft Installation


2 layers (each separately) of the special ferrite tape around the shaft

Fix with 2 layers of mounting tape around the shaft





Coil, depends of shaft diameter 5-18 <u>parallel</u> windings of 0.5mm CUL (Enamelled copper wire) wire, see table for help.

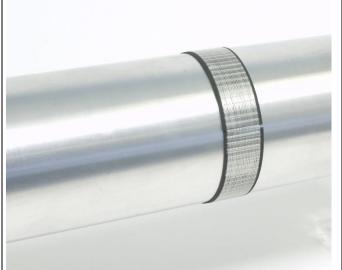




Solder the wires of the coil on the input pins of TEL1-PCM-STG "COIL" .The pins for capacitor are used only for larger diameter >400mm!



Strip the isolation from the end of the wire with a skinning tool or head up you soldering iron over 450°C to burn off the insulation from the wire!

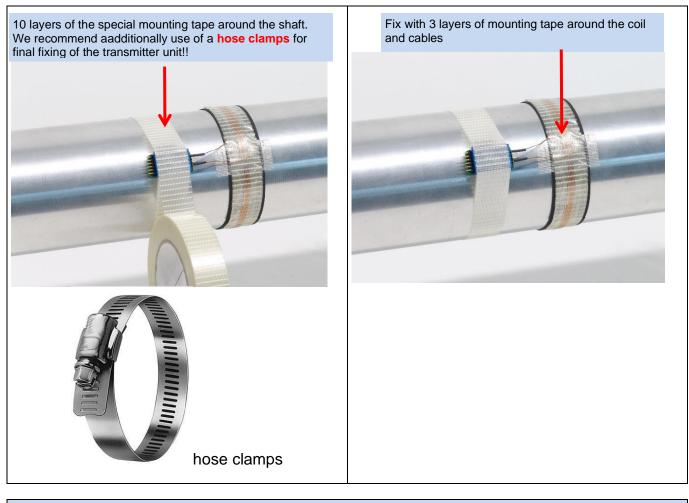

Caution:

Fix TEL1-PCM module with at least 10 layers of the special mounting tape (only for up to 1000g!) around the shaft. Depending on the shafts RPM and diameter particular attention needs to be paid to the safe mounting of the components.

The manufacturer doesn't accept liability for damages, which results from insufficient attachment of the individual components.


The tape is only for test purposes, in order to test the electrical function of the units in the idle state of the shaft.

During the rotation test appropriate safety precautions should be taken.


The entire installation may be used only by authorized persons. By using tape for the attachment, it has to be used in the direction of rotation of the shaft and the end has to be secured. Only non-elastic tapes (Fiberglas Tape) with high tensile strength (100kg/25mm) should be used for pre-fixing. Additionally, use hose clamps for final fixing!! The individual components are to be distributed in such a way on the shaft that imbalances are avoided.

Finding the Correct Number of Windings

The number of windings depends on several factors. The most important influential factors are the diameter, the materiel of the shaft and the environment around the shaft. The table standing below will help you to find the right number windings for steel shafts. The table below is a help to <u>estimate</u> the number of windings fast. To optimize your results you can try one winding more or less.

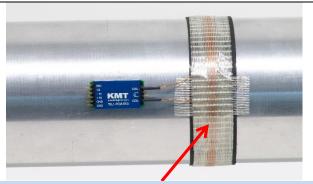

Coil, depends of shaft diameter, 5-18 parallel windings of 0.5 or 0.63mm

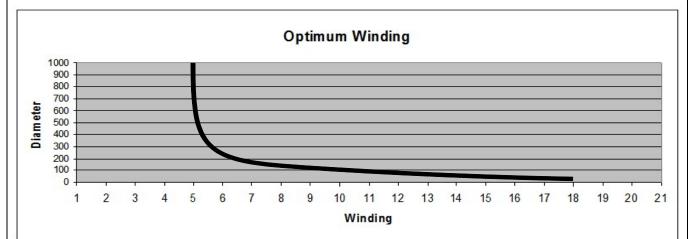



Diameter (mm)	Windings +/-1	max. distance with XL (35mm) Powerhead	Ferrite tape no. of layers	recommend capacitor (Type MKT or MKS 250V)
1000	4-5	12mm	2	without built-in 220nF, only with external 68nF (specify at order
500	5-6	20mm	2	without built-in 220nF, only with external 100nF (specify at order)
500	3	8mm	2	with built-in 220nF (is standard in housing) Not recommend for large diameters!!!!
300	5	27mm	2	with built-in 220nF (is standard in housing)
210	6	28mm	2	with built-in 220nF (is standard in housing)
160	7	28mm	2	with built-in 220nF (is standard in housing)
130	8	35mm	2	with built-in 220nF (is standard in housing)
90	11	35mm	2	with built-in 220nF (is standard in housing)
60	13	35mm	2	with built-in 220nF (is standard in housing)
30	14	35mm	2	with built-in 220nF (is standard in housing)
20	18	35mm	2	with built-in 220nF (is standard in housing)







With built-in 220nF capacitor for shaft up to 400mm recommend! Standard version!

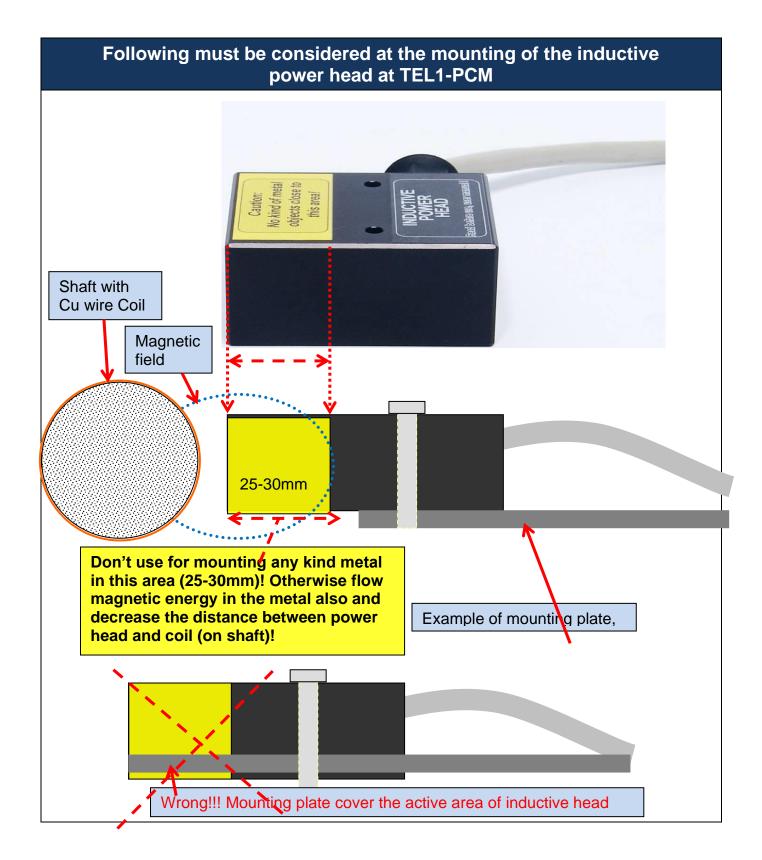


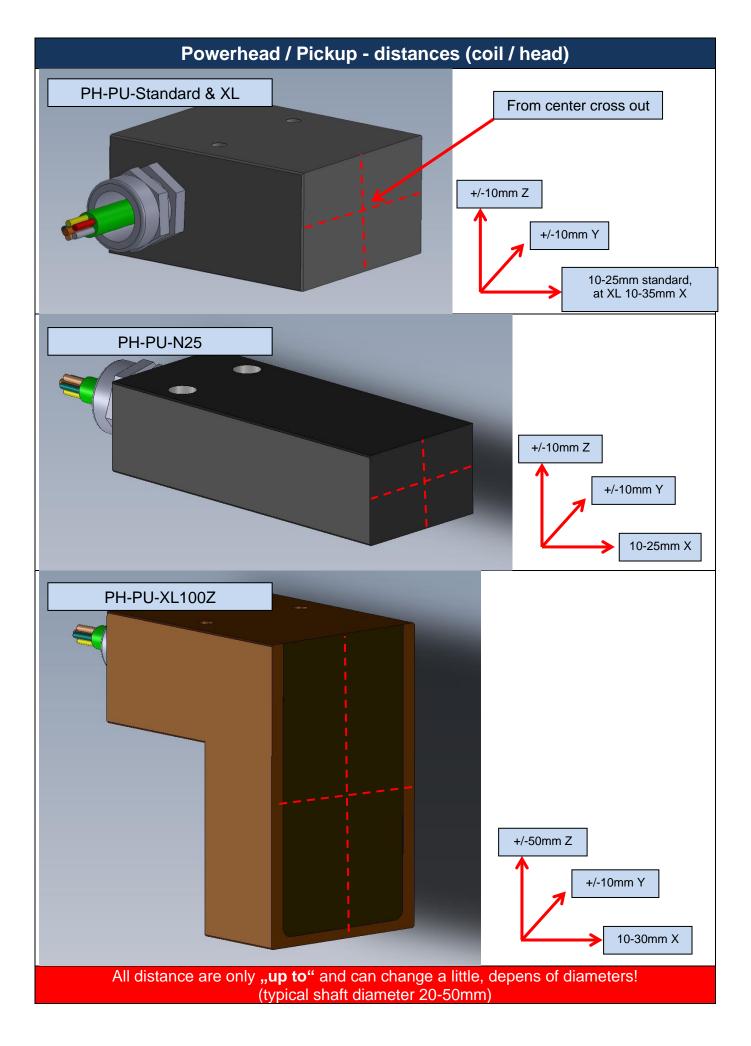


Dimensions Powerhead / Pickup (Standard and XL)

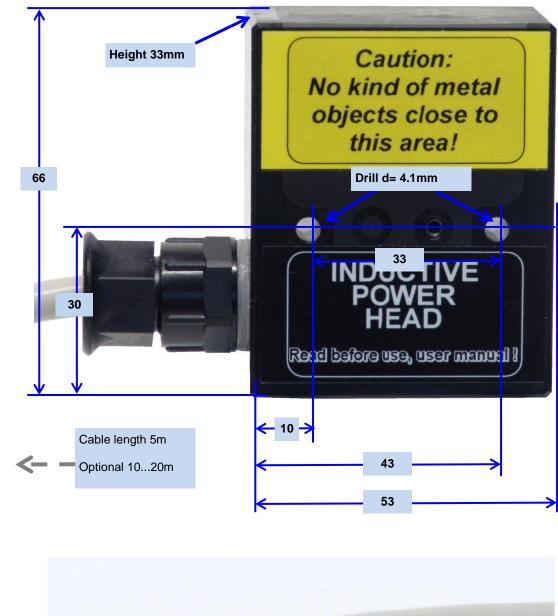


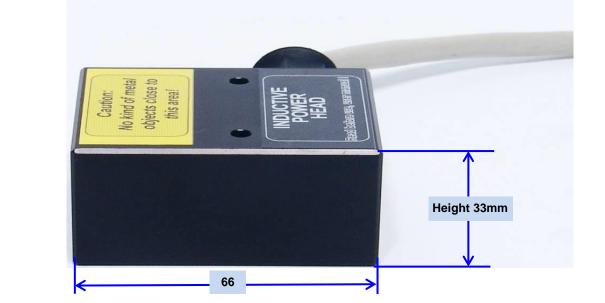


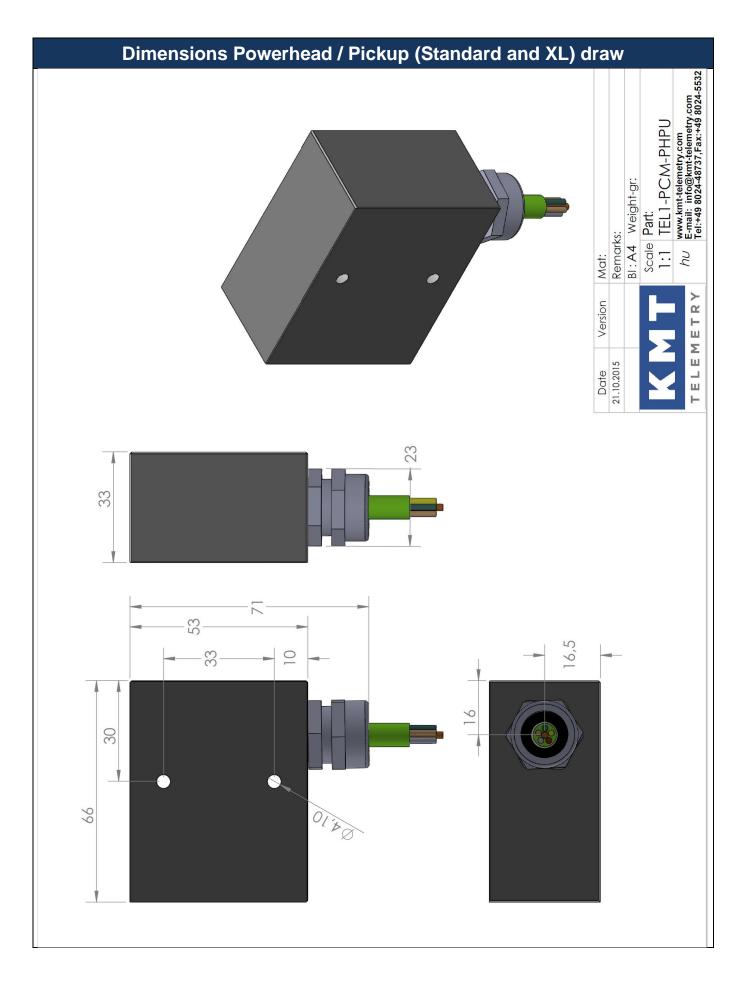


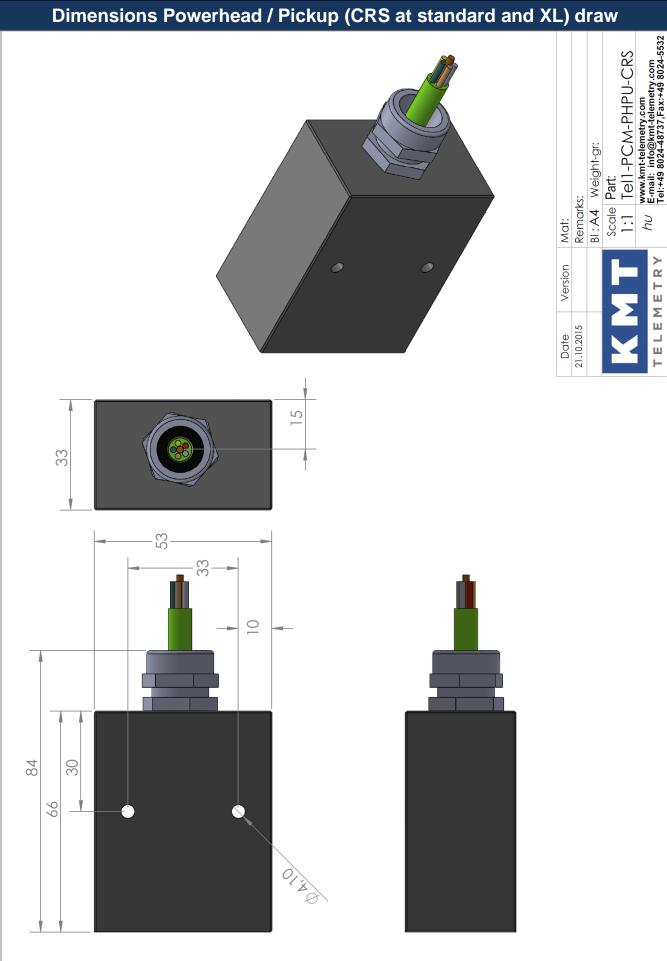

CRS = cable rear side out!

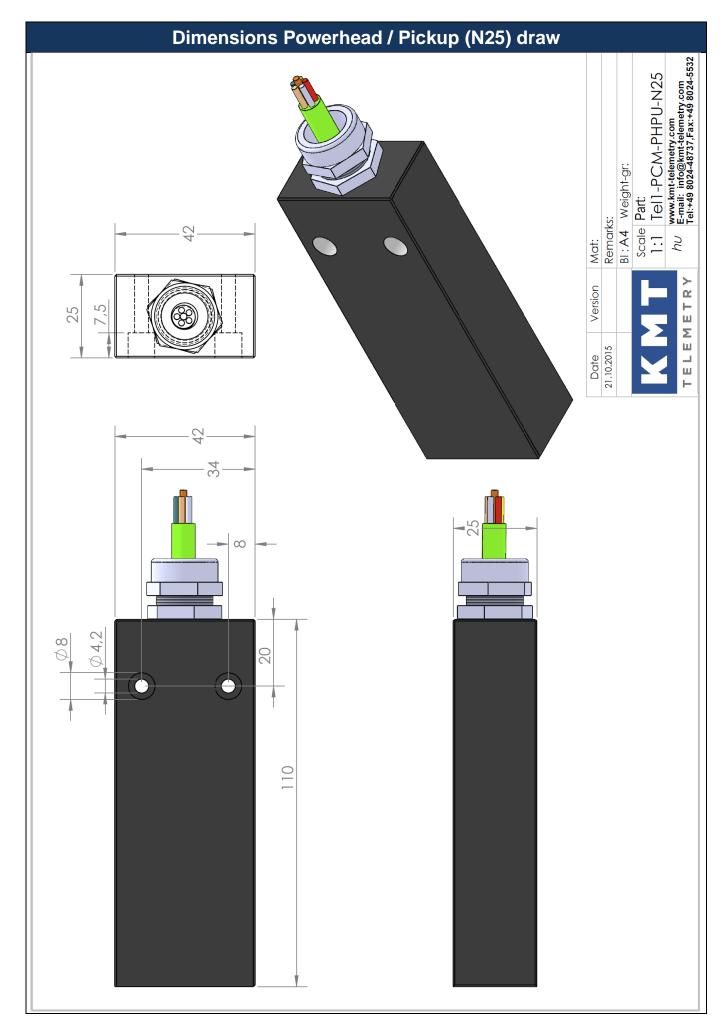

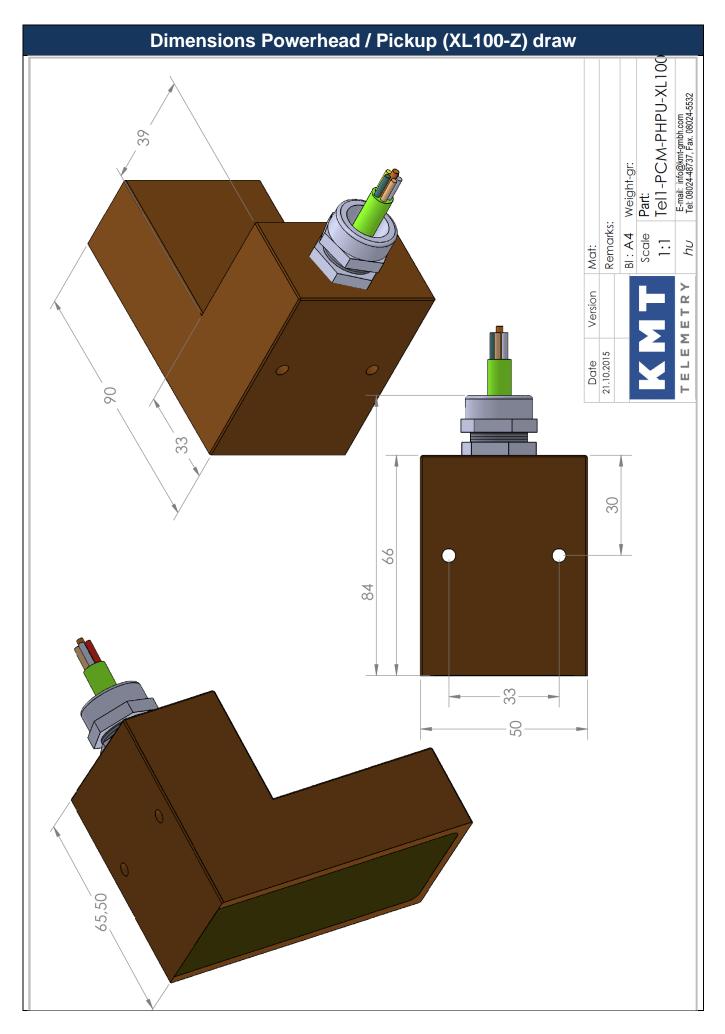

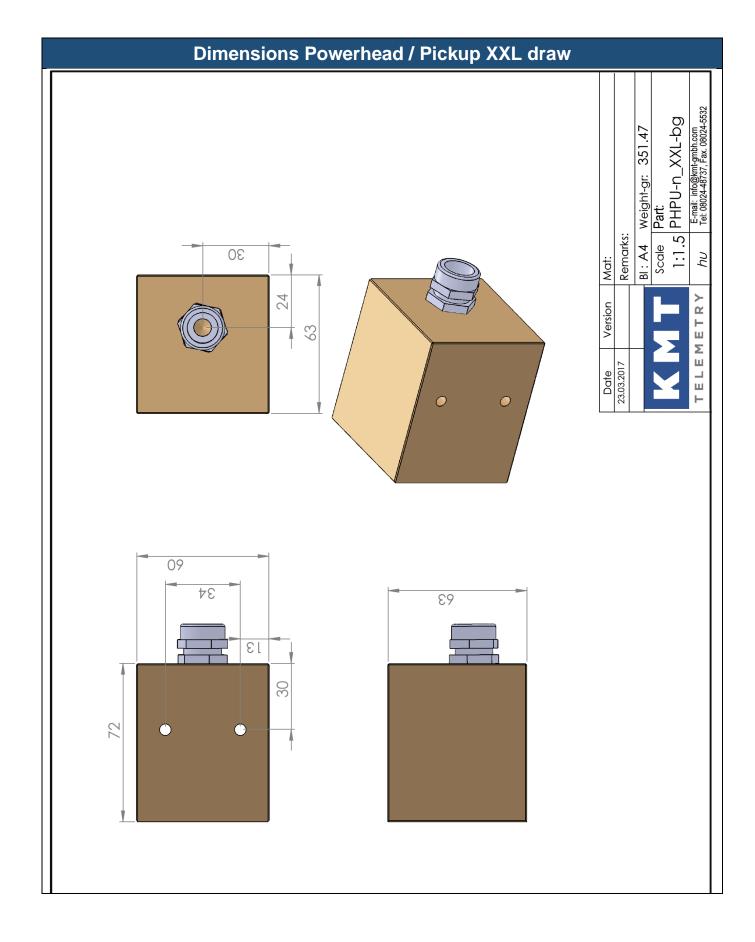

Version 2021-02

Kraus Messtechnik GmbH

Gewerbering 9, D-83624 Otterfing, 2 +49-8024-48737, Fax. +49-8024-5532 – Germany Home Page http://www.kmt-gmbh.com Email: info@kmt-gmbh.com



Konformitätserklärung

Declaration of Conformity Declaration de Conformité

Wir We Nous KMT - Kraus Messtechnik GmbH

Gewerbering 9, D-83624 Otterfing, Germany

Anschrift Address Adress

erklären in alleiniger Verantwortung, daß das Produkt declare under our sole responsibility, that the product declarons sous notre seule responsibilité, que le produit

Bezeichnung Name Nom

Typ,Modell,Artikel-Nr., Größe Type,Model, Article No.,Taille Type, Modèle, Mo.d'Article,Taille

Messdatenübertragungssystem

TEL1-PCM, TEL1-PCM-BATT

mit den Anforderungen der Normen und Richtlinien fulfills the requirements of the standard and regulations of the Directive satisfait aux exigences des normes et directives

108/2004/EG

Elektromagnetische Verträglichkeit EMV / EMC

DIN EN 61000-6-3 Ausgabe 2002-8 Elektromagnetische Verträglichkeit EMV Teil 6-3 Fachgrundnorm Störaussendung

DIN EN 61000-6-1 Ausgabe 2002-8 Elektromagnetische Verträglichkeit EMV Teil 6-1 Fachgrundnorm Störfestigkeit

und den angezogenen Prüfberichten übereinstimmt und damit den Bestimmungen entspricht. and the taken test reports und therefore corresponds to the regulations of the Directive et les rapports d'essais notifiés et, ainsi, correspond aux règlement de la Directive.

Otterfing, 27.04.2006

Martin Kraus

Han

Ort und Datum der Ausstellung Place and Date of Issua Lieu et date d'établissement Name und Unterschrift des Befugten Name and Signature of authorized person Nom et signature de la personne autorisée

Kraus Messtechnik GmbH Gewerbering 9 D-83624 Otterfing - Germany Tel. 08024-48737 - Fax 08024-5532 www.kmt-gmbh.com